




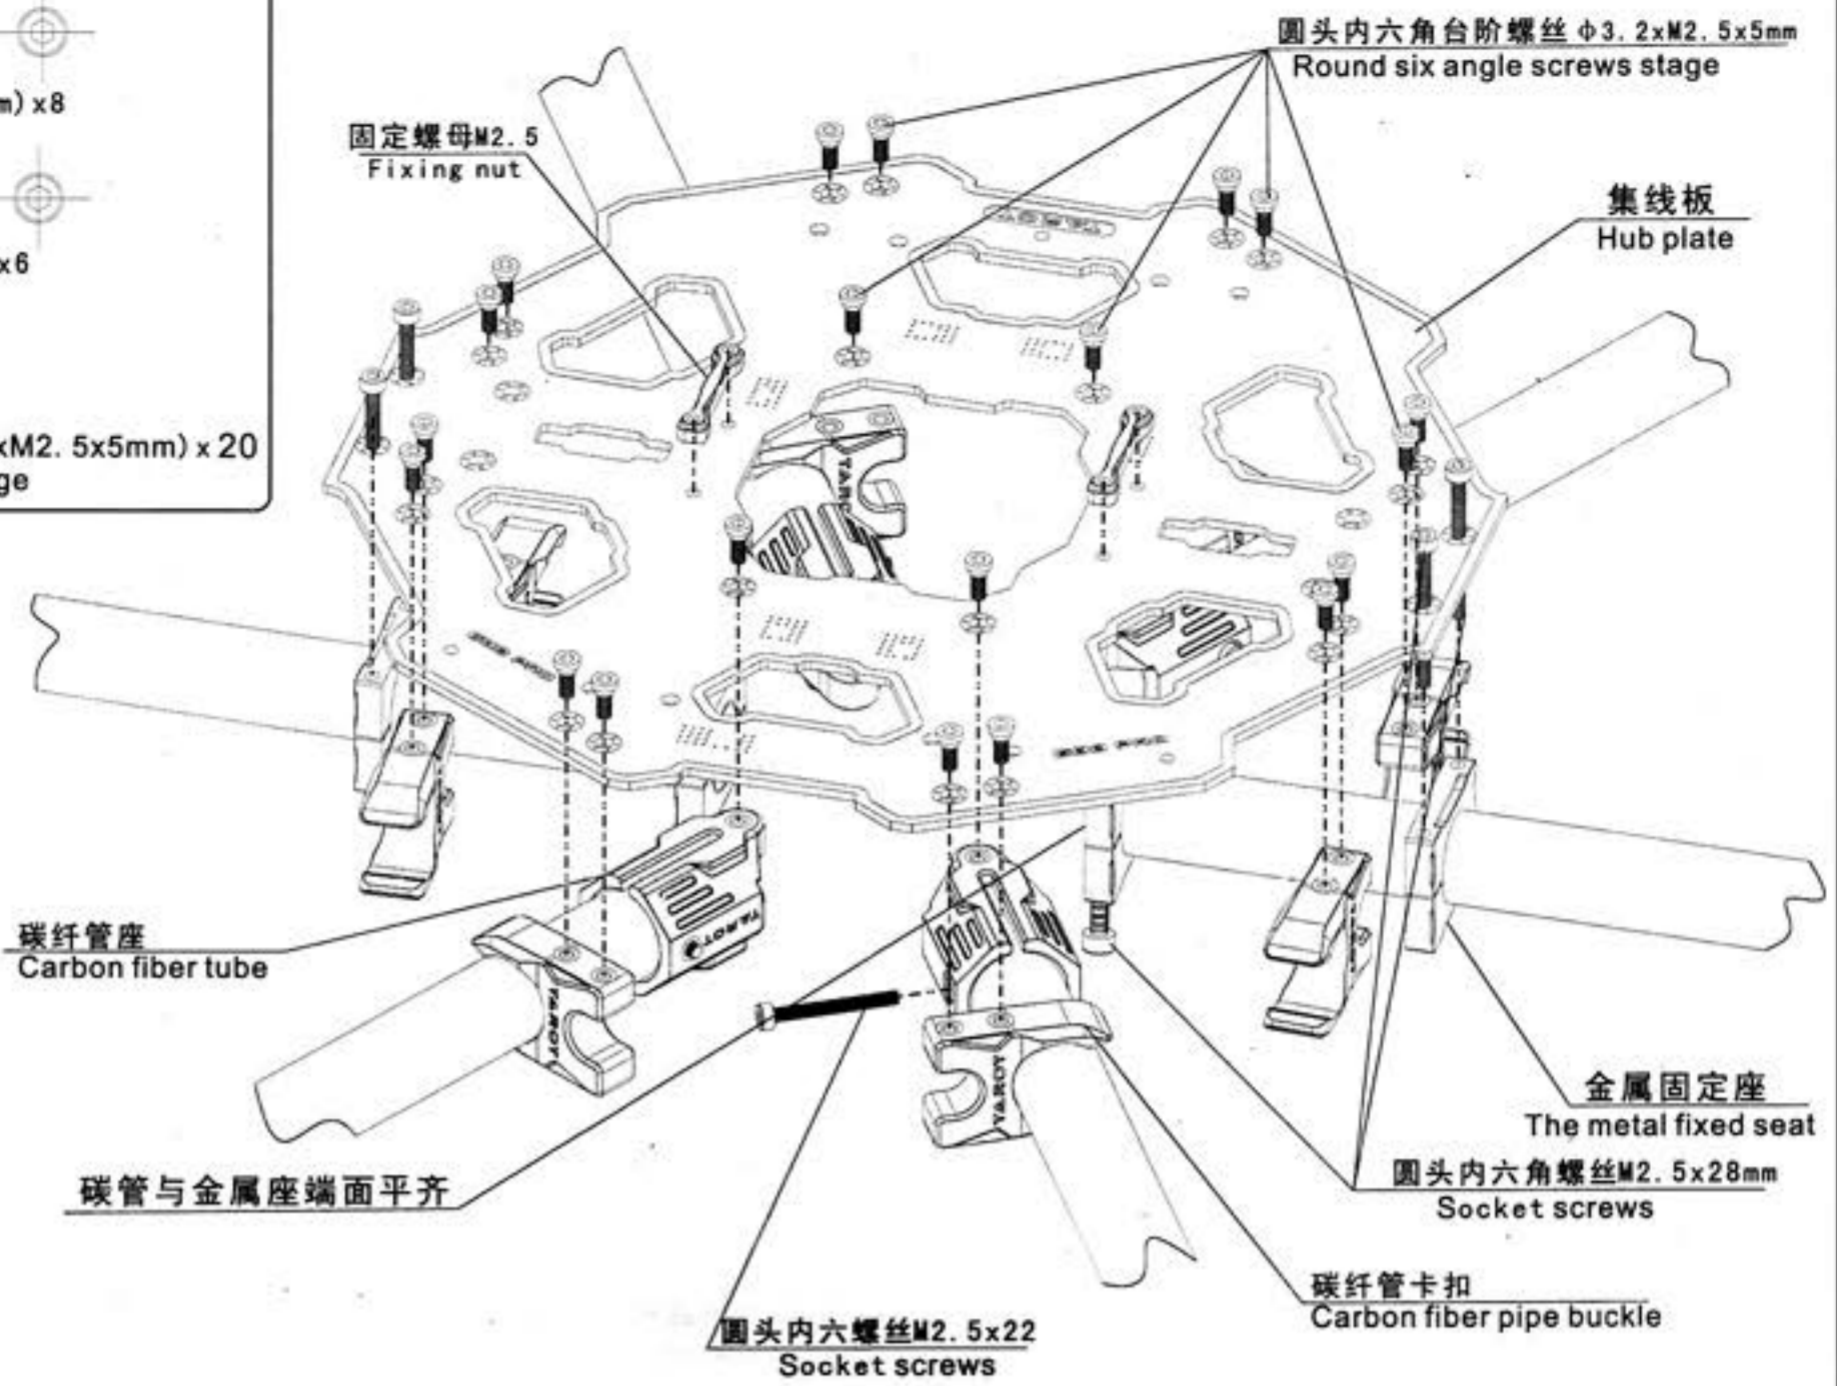


RoboJax.com

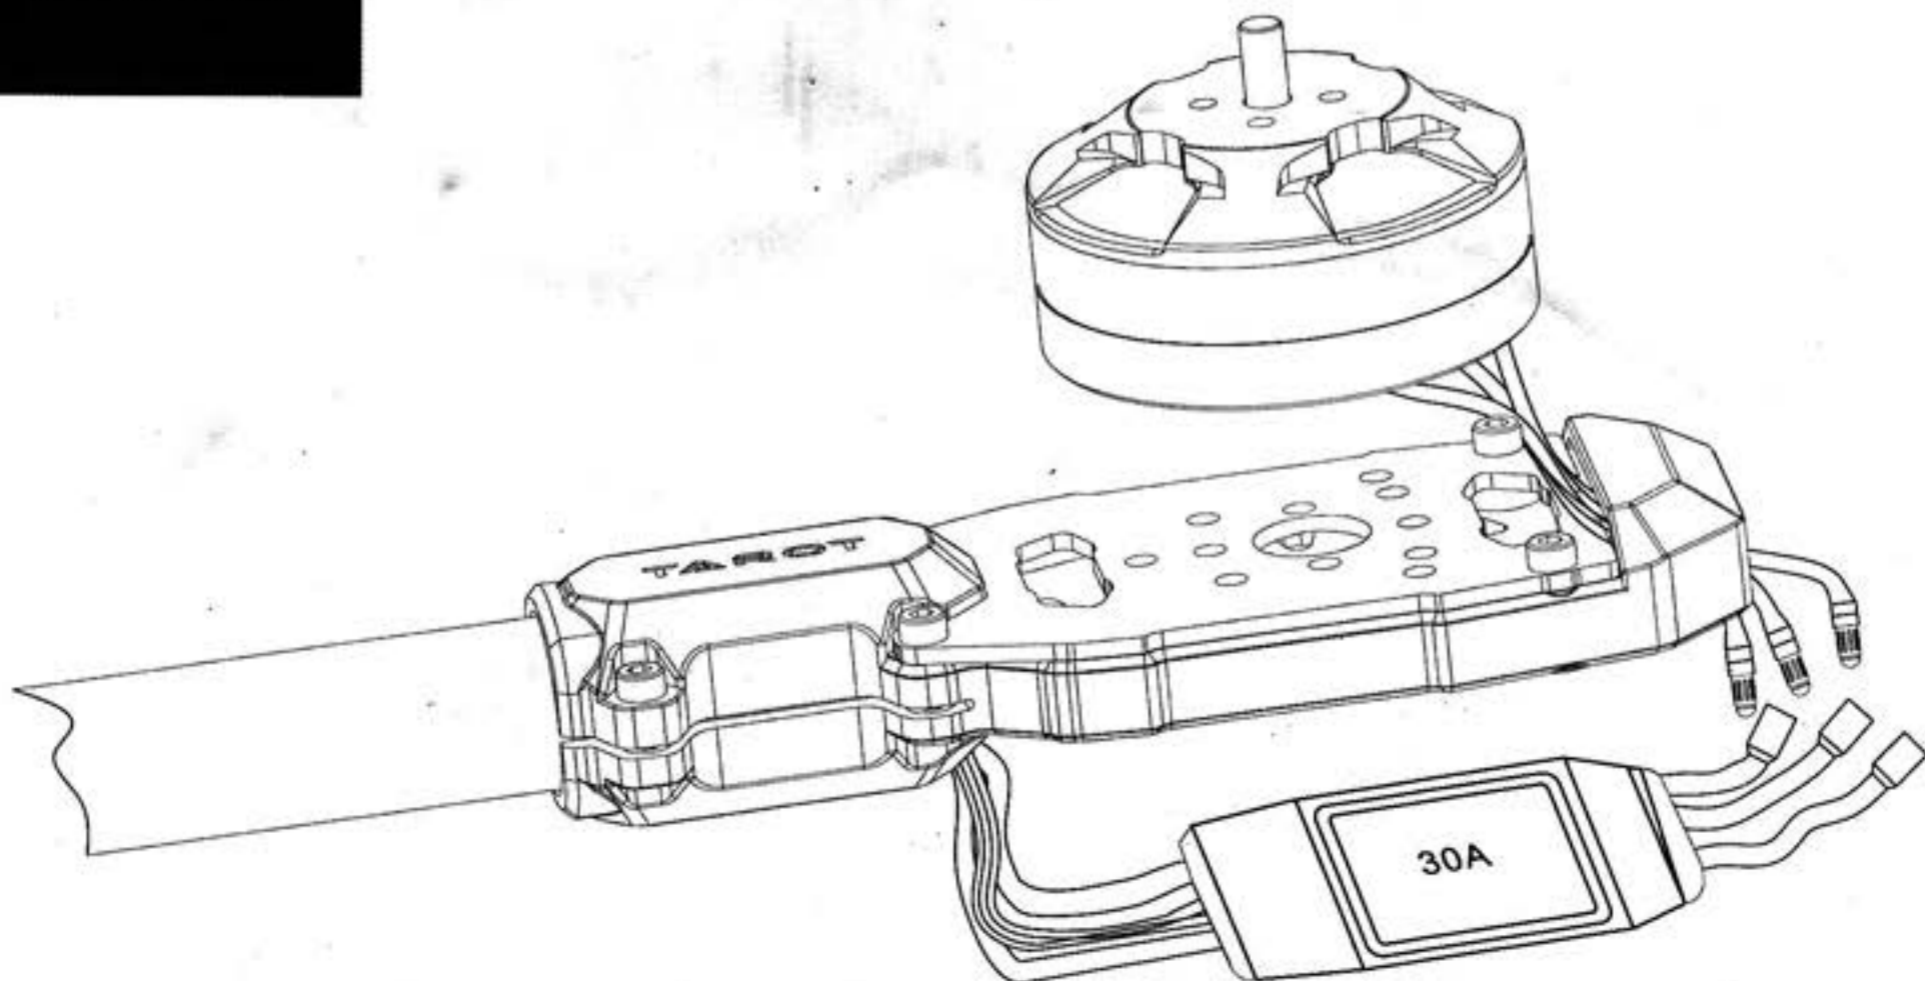


-  圆头内六角螺丝 (M2.5x28mm) x8
Socket screws
-  圆头内六角螺丝 (M2.5x22mm) x6
Socket screws
-  圆头内六角台阶螺丝 (φ3.2xM2.5x5mm) x 20
Round six angle screws stage


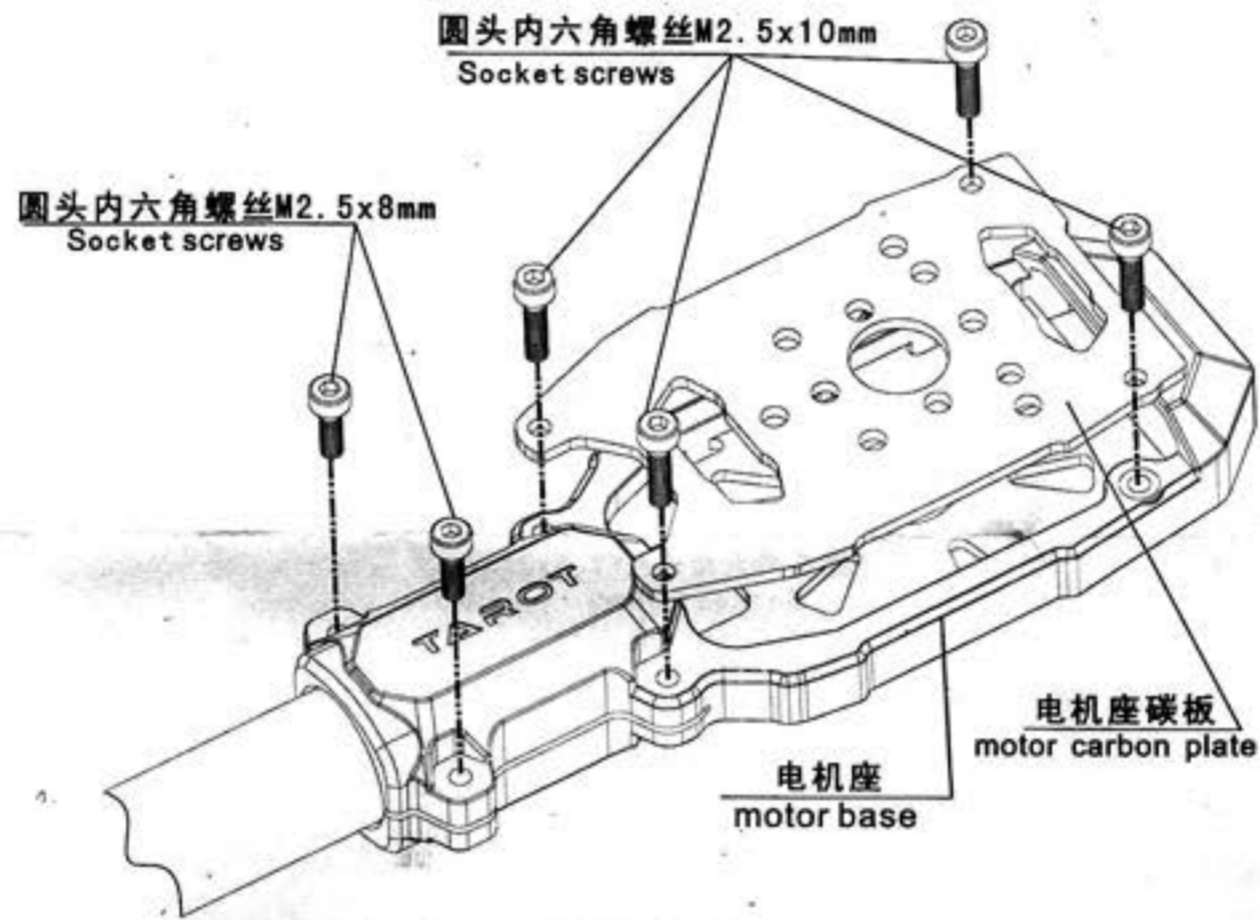


RoboJax.com



焊线示意图

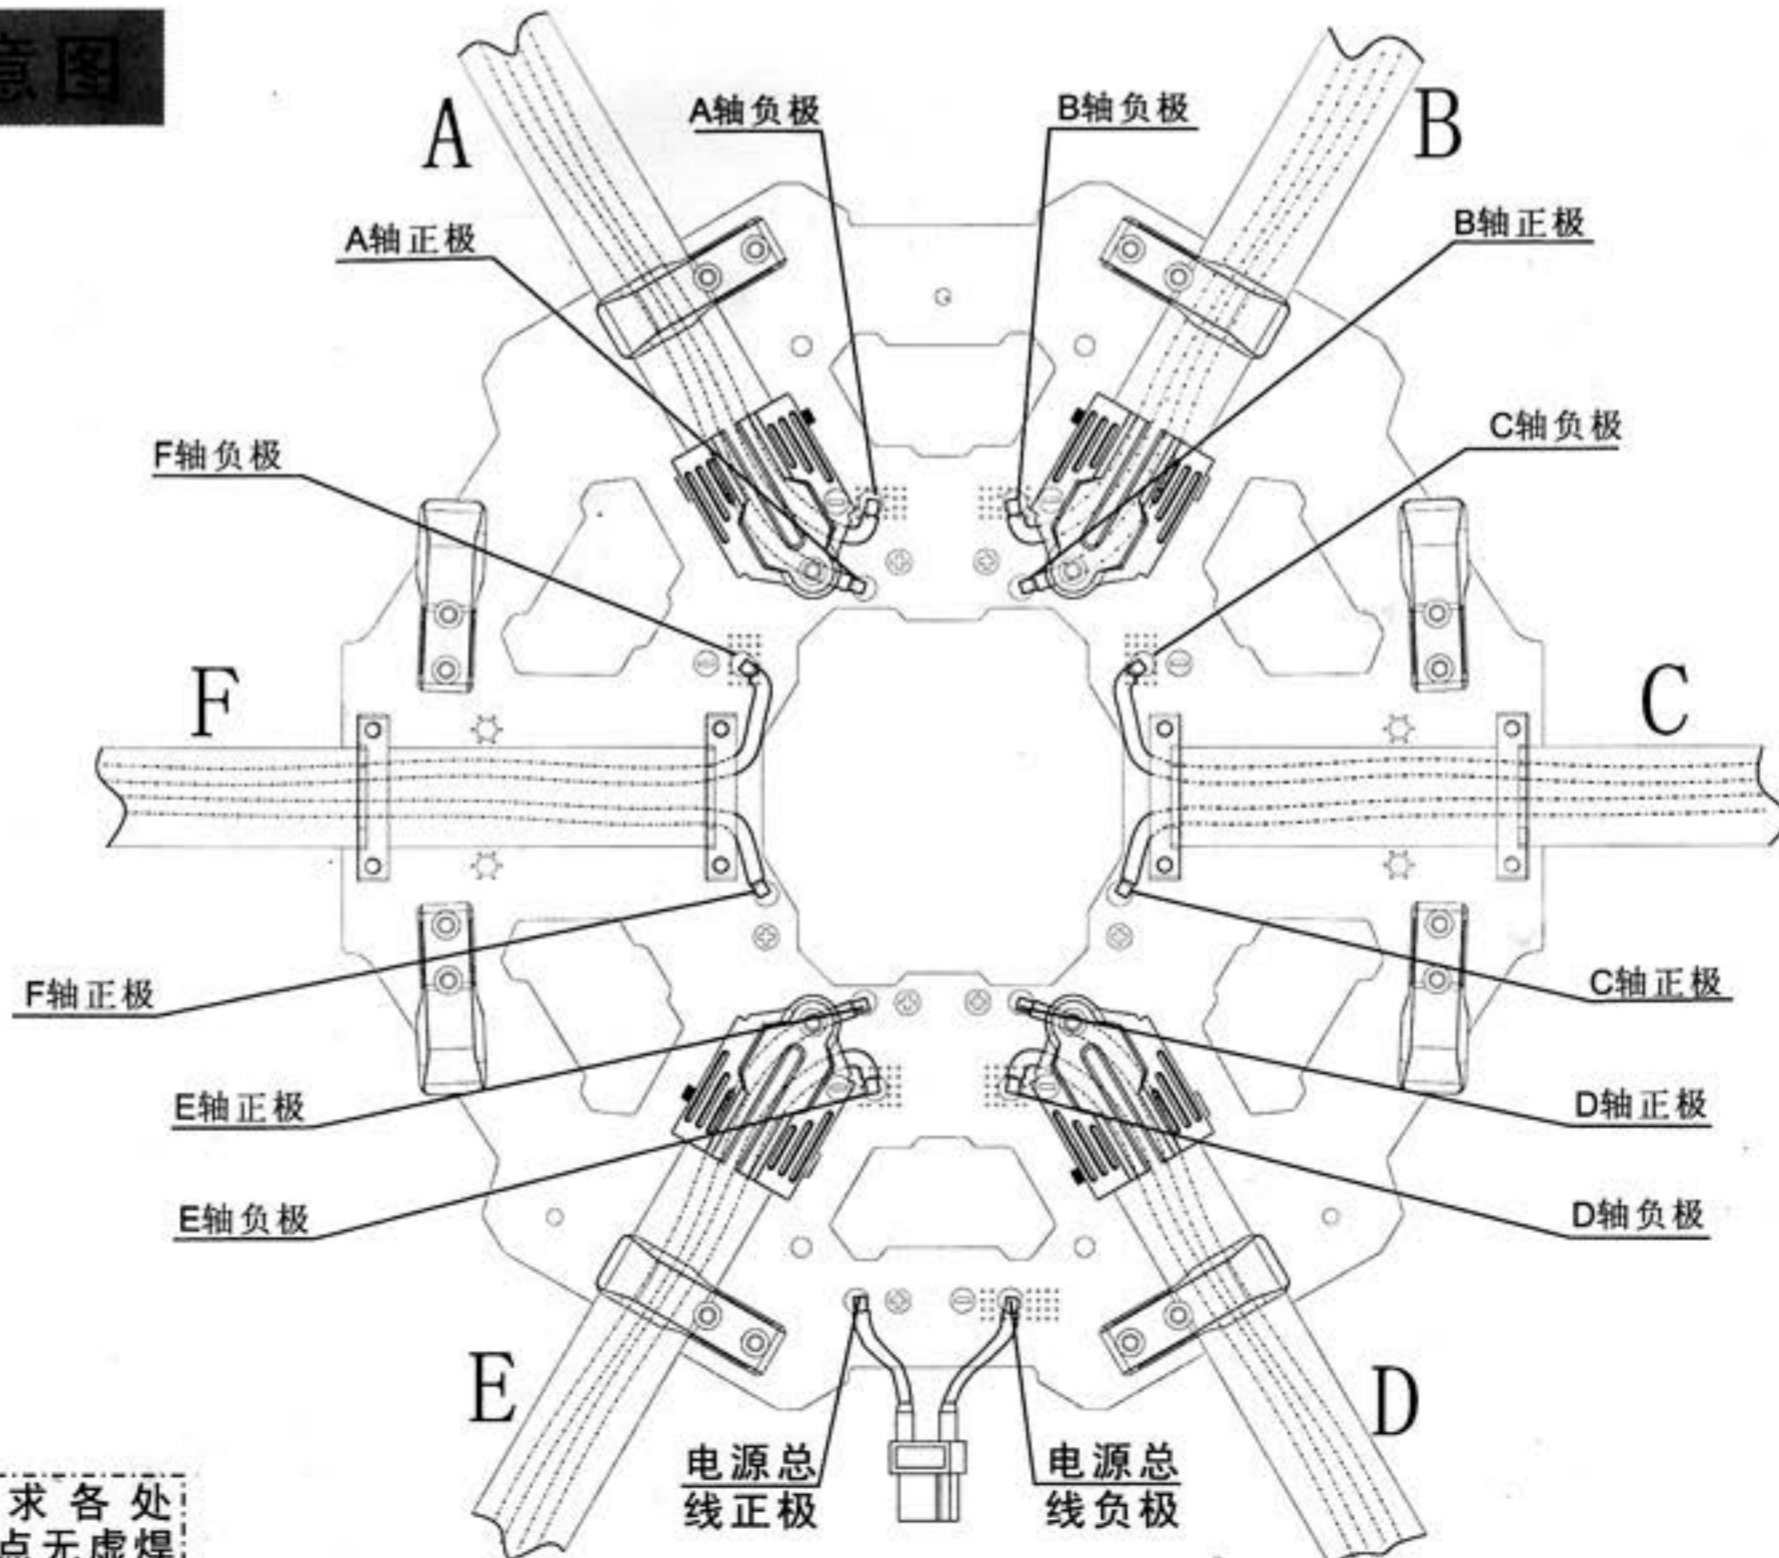

要求各处
焊点无虚焊

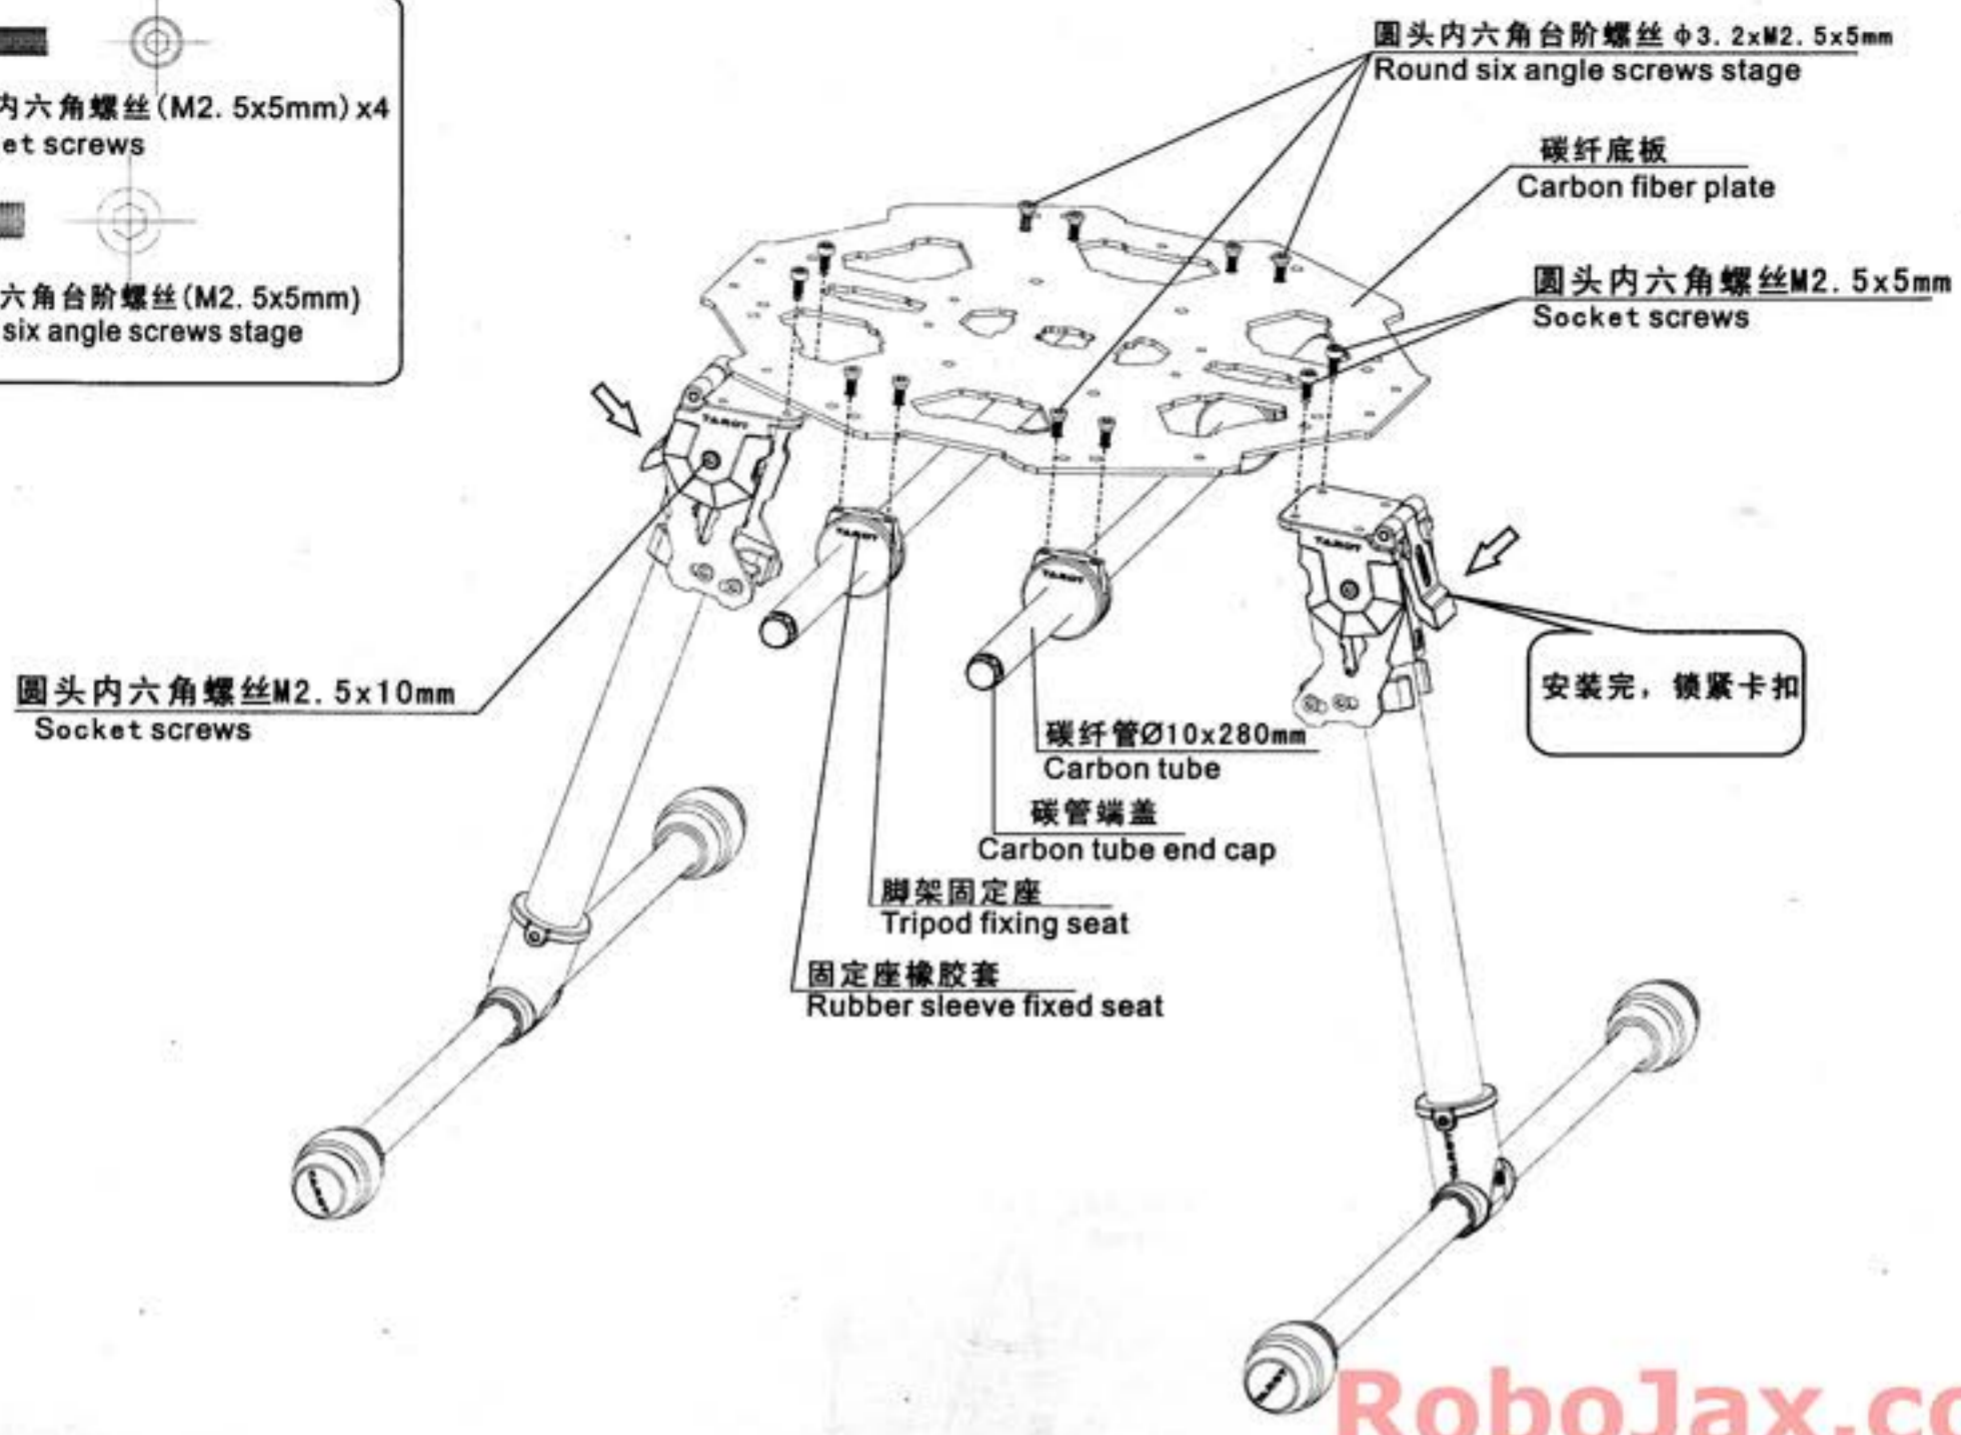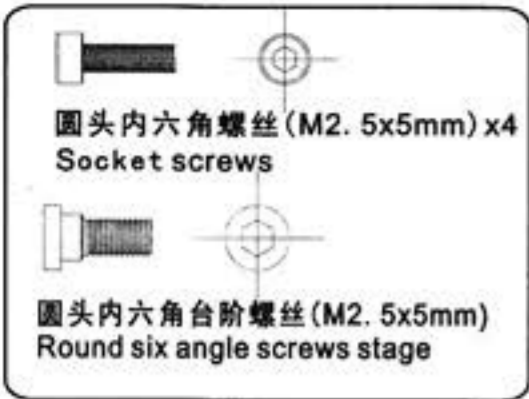


RoboJax.com

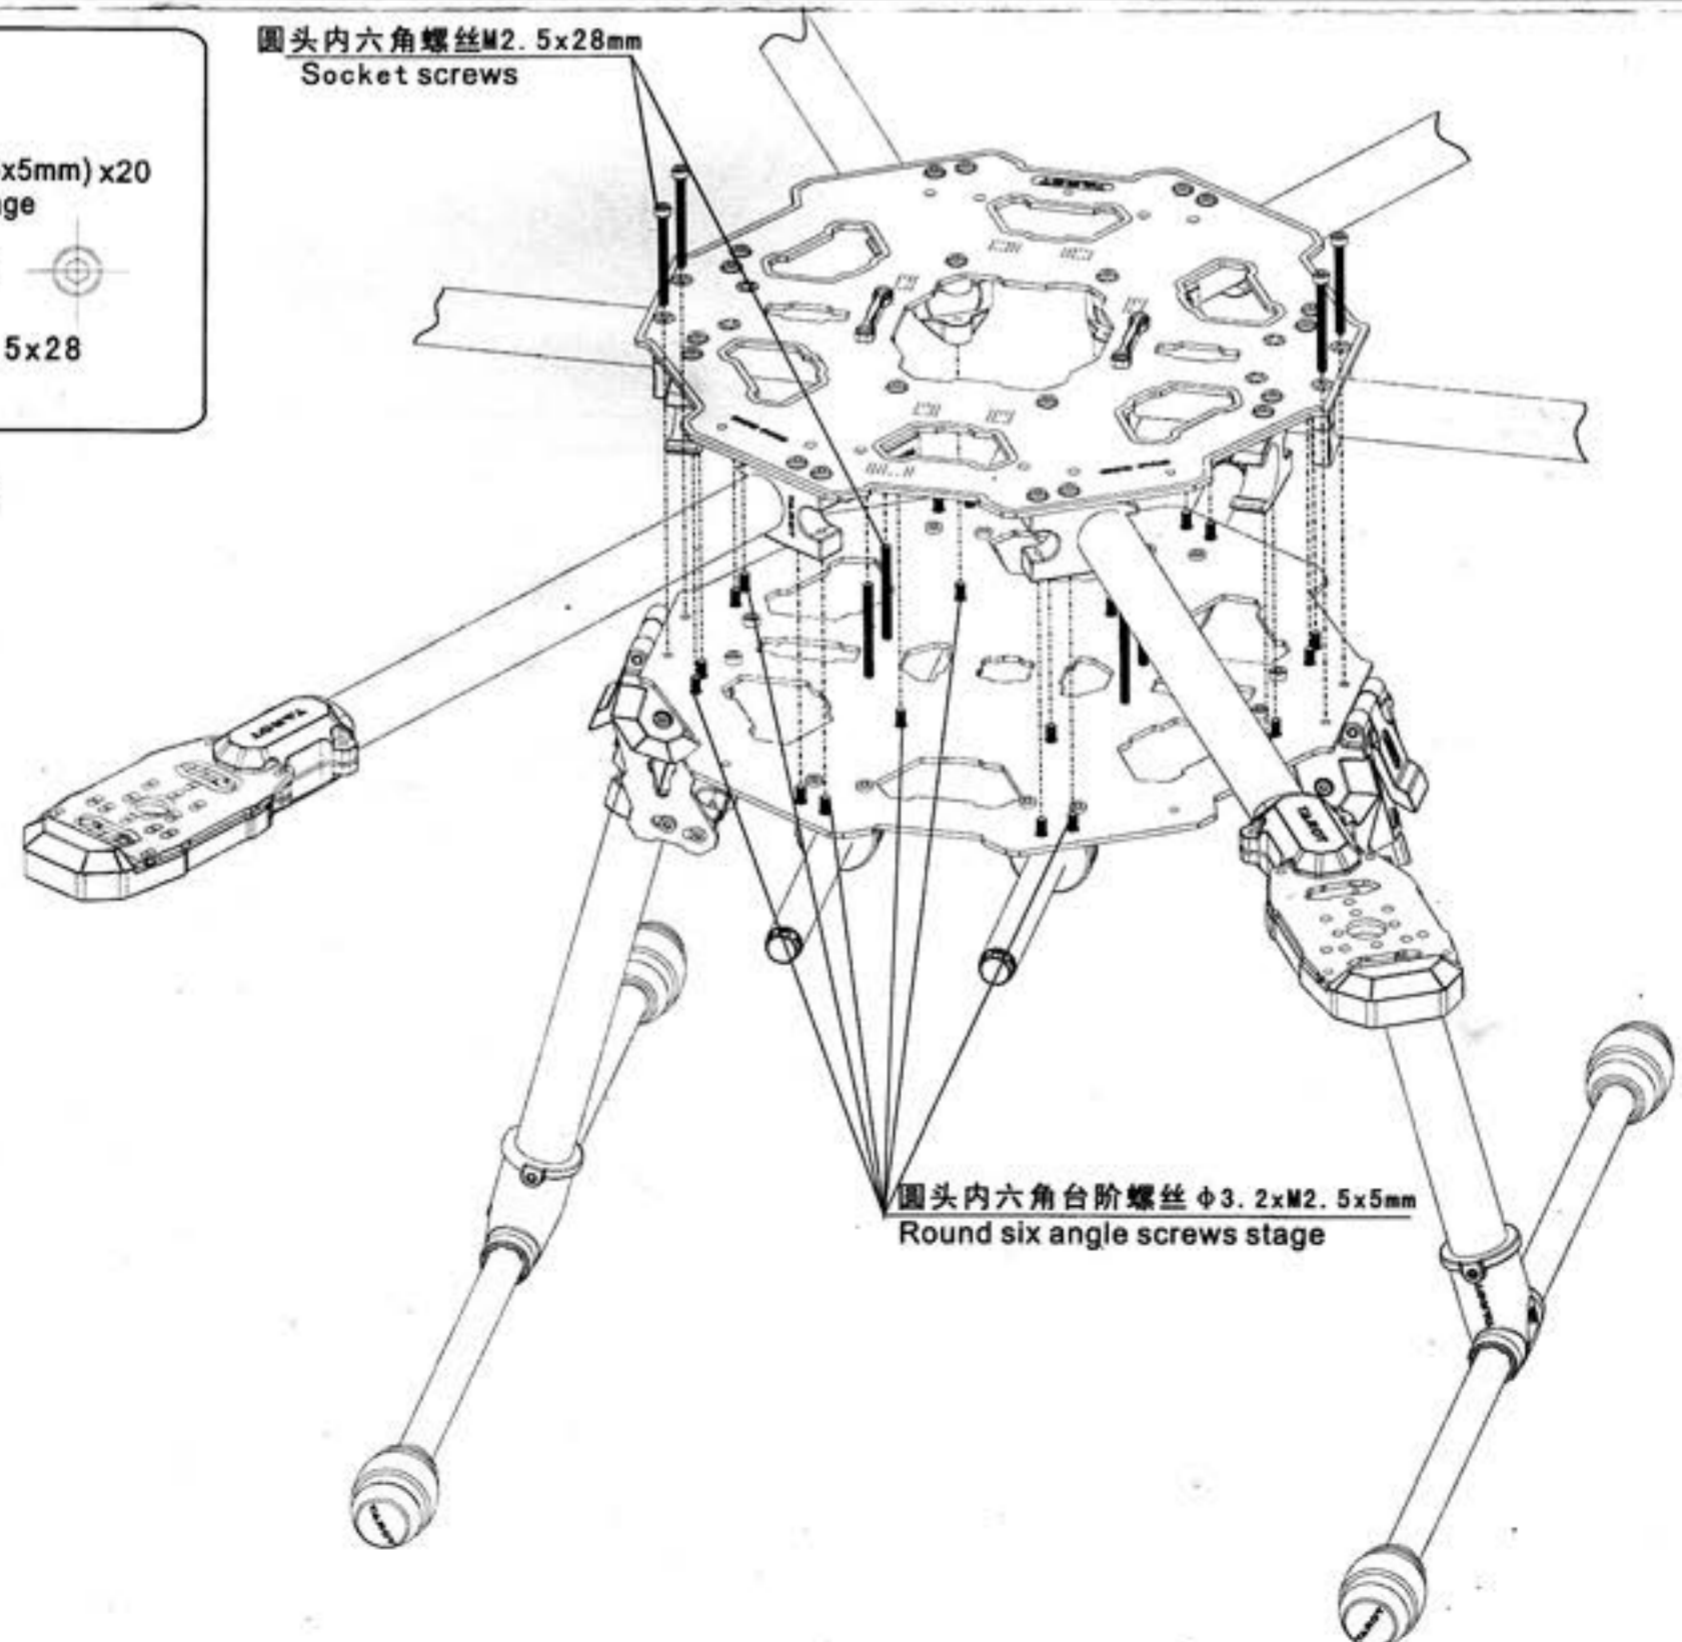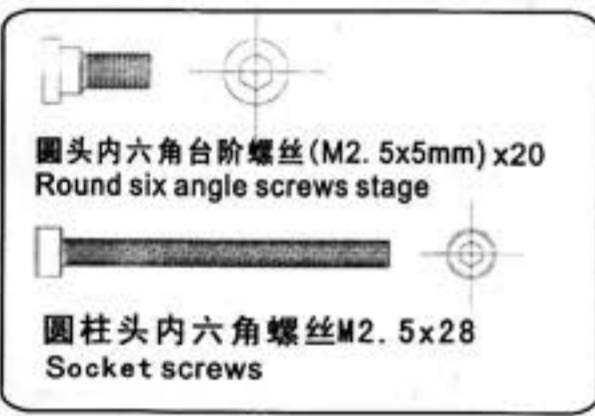

RoboJax.com


This manual has been brightened and cleaned by the efforts of people at RoboJax.com

半圆头内六角螺丝(M3x6mm) x6
Socket button head screw

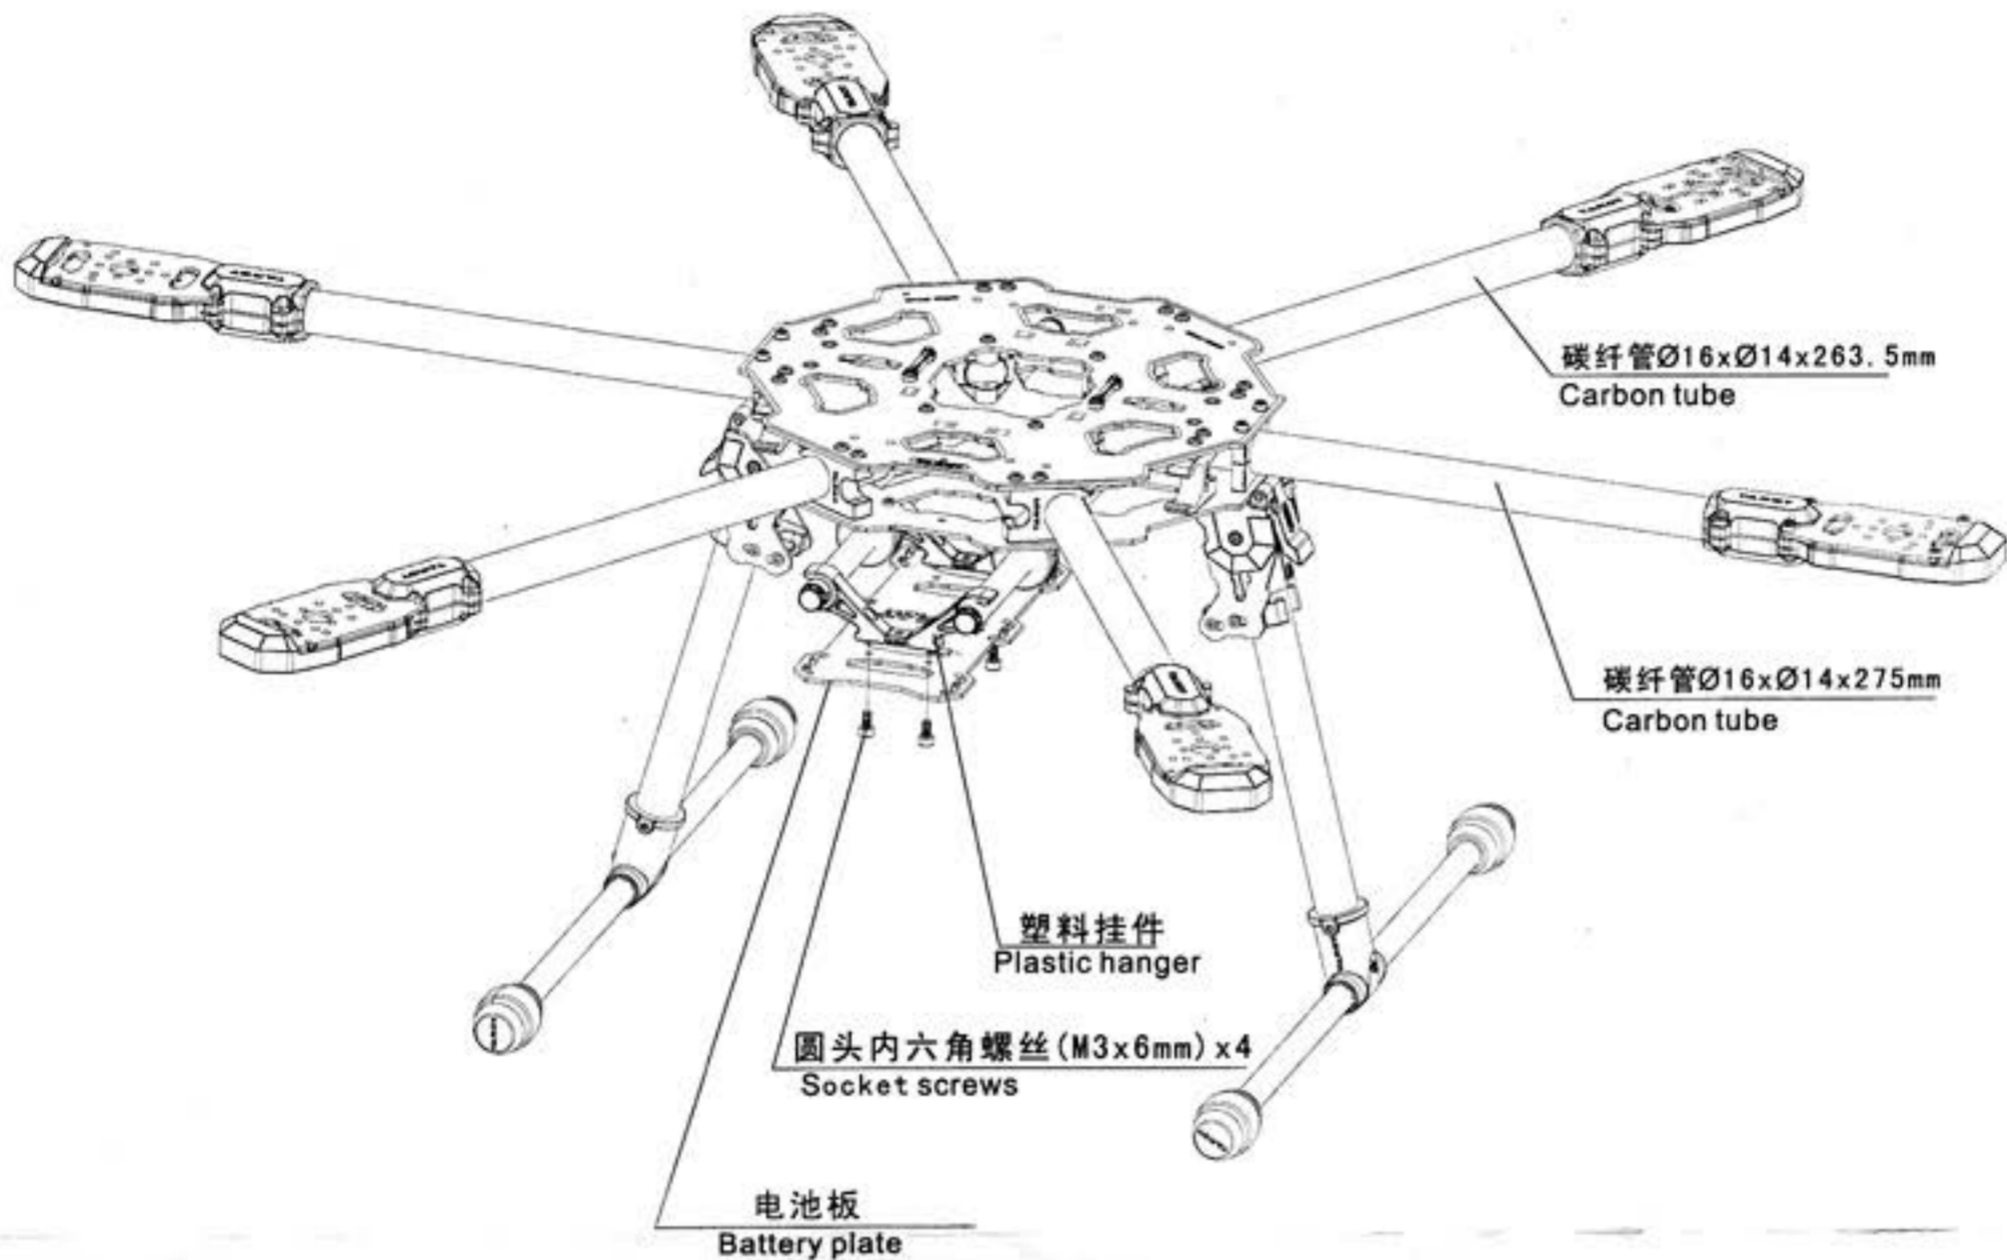

CAUTION 注意

TAROT

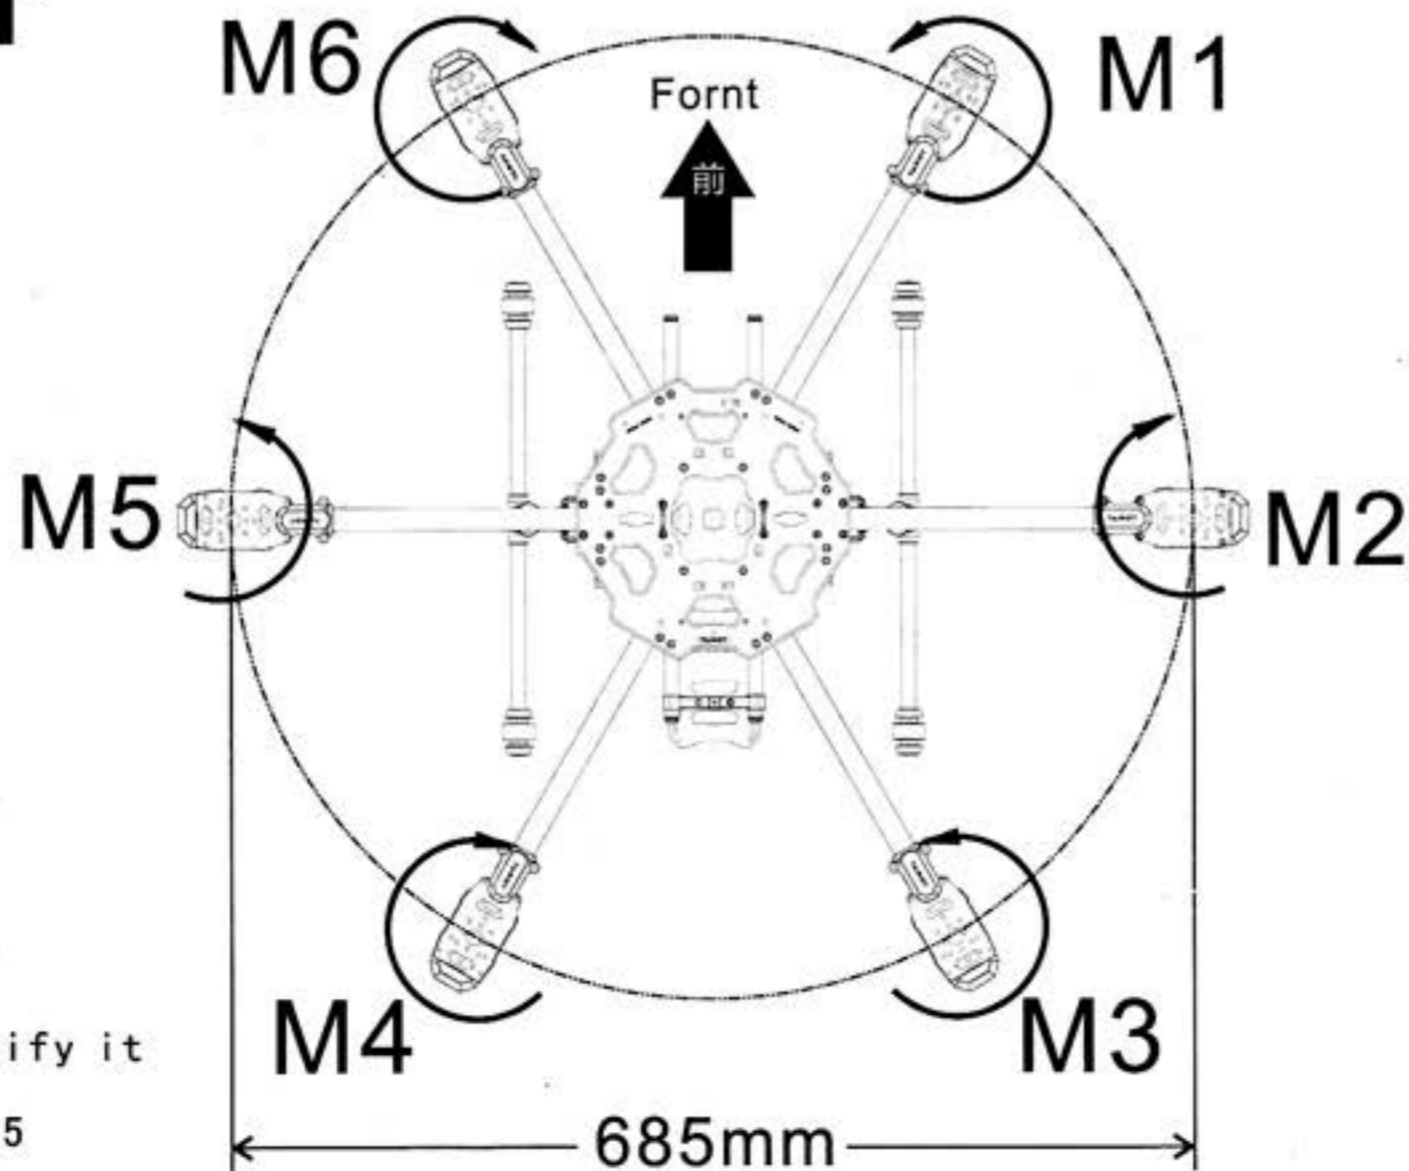

CAUTION 注意

螺旋桨有正反之分，安装前请仔细辨认！

M1、M3、M5相同，M2、M4、M6相同。

There are difference of pros and cons in the propeller, please identify it carefully before installation! M1、M3、M5 is the same, M2、M4、M6 is the same too.